

### Anti-Theft Alarm System

The anti-theft alarm can be armed or disarmed by locking or unlocking the front doors with the master key or the supplementary key.

With the alarm system armed an additional horn will sound intermittently for approx. 30 seconds if an unauthorized person opens a door, the

hood or the trunk lid, turns or bridges the steering lock or actuates the service brake. It keeps on sounding for approx. 30 seconds even if the triggering component (e.g. the door) is closed again immediately.

#### Special functions:

The trunk lid can be opened only when the alarm system is disarmed.

#### Trunk lid emergency release:

If the trunk lid cannot be opened with the alarm system disarmed, it can be opened by means of an emergency control. For this purpose, remove rear seat cushion and fold back LH cover. Then pull the ring of the emergency release cable while another person at the same time opens the trunk lid.